

Fresnel Lens Installation

Fresnel lens narrows beam of light by 35-40% and increases distance of beam.

To Install Fresnel Lens:

Remove clear lens cap from flashlight and place it on a clean, dry, level surface with open end up. With clean, dry hands, carefully remove Fresnel lens from plastic bag, handling by the edges only. With **NARROW SIDE** of beveled edge facing **DOWN**, set the lens inside the clear lens cap. Cover the lens with the plastic bag and gently push straight down with your thumb. The lens should be flush with inner side of the lens cap. Then reinstall lens cap onto flashlight.

To Remove:

Remove lens cap from flashlight. With open side down, gently tap onto a clean, dry surface until the Fresnel lens drops out. Handle carefully.

